

OPC Server License Activation


How to locate the INGEAR OPC Server Installation ID

This document explains how to locate the INGEAR OPC Server license Installation ID.


In this example we'll use the INGEAR Allen-Bradley OPC Server. However, the same procedure will apply to all other INGEAR OPC Servers.

Install the INGEAR OPC Server software on your computer

Select *Start | Programs | INGEAR OPC Servers | INGEAR AB OPC Server | AB OPC Server*.

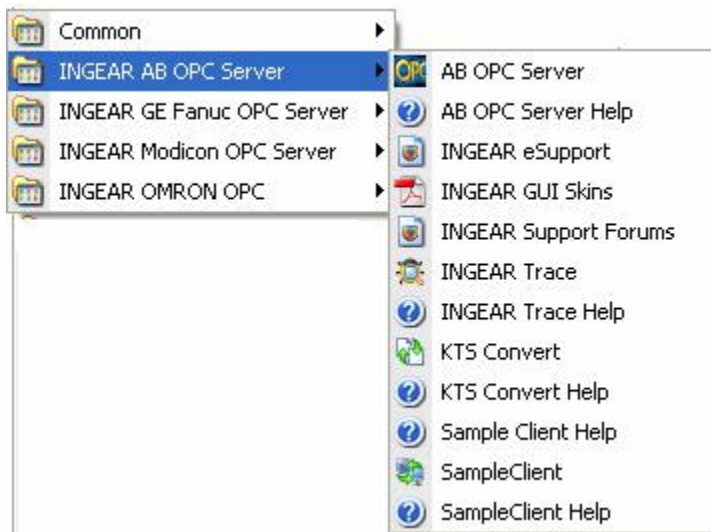

From the menu select License | Server Registration...

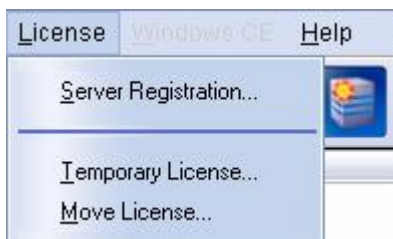

This will display the License activation dialog box

Installation ID

Select the license edition you purchased.

- **Full License Edition**
- **Solo Link License Edition**

The Installation ID is the first number sequence in the dialog box

OPC Server License Activation



Activate by Phone

You can contact our sales desk Monday – Friday (8:30AM – 5:30PM Eastern Time US)

Toll Free: 1.866.935.7979 (US/Canada)

Telephone: 1.610.935.8282

Provide the following information:

- **Installation ID**
- **Serial Number** (this was provided to you when you purchased the software)

After verification, our sales desk will provide you with the **Activation Code**. Enter your **Serial Number**, **Activation Code**, and click the **Activate** button

Activate from the Web

Visit our on-line activation form register.ingeardrivers.com